

MAGNETIC GASKET REPLACEMENT

1. The door gasket snaps into a narrow channel inside the door's edge and can be removed by pulling it upward starting at the bottom of the door.
2. The new gasket is installed by pushing its dart into the door groove starting at one upper corner. Be sure that the gasket is the right size before attempting to install it.

